

RUTGERSON



Rutgerson RC75X

Spare part replacement
manual - English

RUTGERSON



Pic 1-2:

Loosen the screws (2) in the bottom and take them out of their holes.

Pic 3-4:

Pull the clutch or clutches package away from their mounting plate. (forward is best but backwards will work as well). Now the clutch /clutches are separate from the bottom plate.

Pic 5-6:

Loose the two screws on the top of the clutch, on one side. The side can now be removed and the inside of the clutch is revealed.

Pic 7-8:

Take out the spring package and the handle (if this is broken just change it, use some grease between the handle and the cam).

Pic 7-11

If the second handle is broken, the middle side has to be removed (just pull it to the open side) and change the middle handle.